


Sillosocks Geese Decoys



Assembly Instructions

The first step is to locate the 2 holes on the top of the 3D plastic head. Insert the straight end of the stake in the hole closest to the bill. Pull the stake all the way down until the end of the 'U' goes into the other hole on the head. (see picture below).

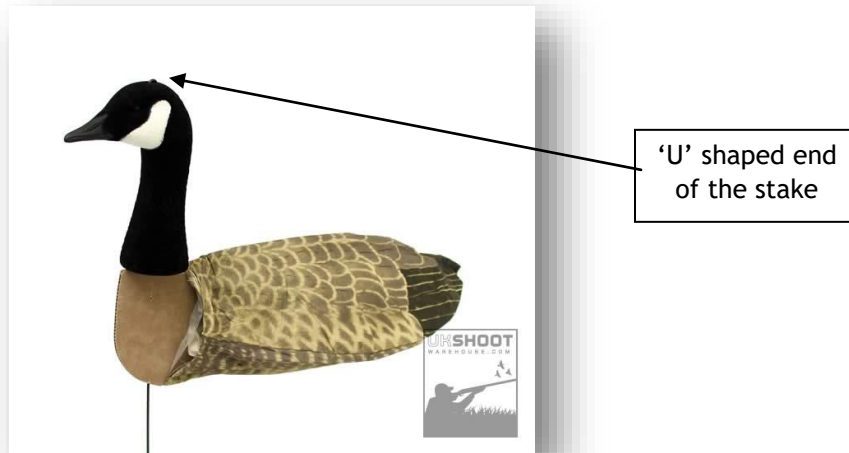

The next step is to insert the stake attached onto the body. Note the position of the stake in the picture. Slightly heat the tip on an open flame and push the stake through the corrugated body. Let the stake cool and put the stake from the bottom and push on the top of the stake to get the head in the desired position.

Our unique head attachment allows you to rotate the head left and right to any position for hunting. For storage, your sentry decoy will pack better if the head is straight forward.

Note: If you want to paint the top of your stake, do that before you assemble the decoy.

Instructions for use

Once the stake is positioned through the head and into the body the decoy is ready for use. Place the steel stake into the ground as far as needed to hold the decoy in place.

When placing the decoy in calm conditions (ie no wind), shake the decoy by the neck or blow into the bag (to inflate) until the wind picks up.

If mixing the Sillosocks with other decoys, put the Sillosocks downwind and on the outside edges of the spread.

Helpful hints:

Place the decoy facing into the wind for best results. The windsock will usually orient into the wind on its own.

1. Place the wire stakes vertically to the ground. That way when the wind changes direction, the backbone of the decoy remains parallel to the ground and always looks good.

Exception to this rule: in heavy wind, lean the stake back to where the tail of the decoy touches the ground. Also, push the stake in further into the ground this will slow any excessive movement of the decoy.

2. If used during rain you may cut a slit along the Sillosocks logo to drain water while in use - it will not affect decoy action.
3. In high wind situations (+ 38 mph), push stake further into ground to shorten the distance from the bill to ground.
4. Set out and pick up the decoys using the stakes not the heads.
5. When using Sillosocks in cut cornfields you can insert the stake directly into cut stalks.
6. Use care when storing and transporting the decoy to avoid crushing the head and body.
7. The Tyvek windsock bodies can be washed in the washing machine on a gentle cycle. If you do this then please drip dry! Do not use hot water or hot heat in the dryer or they will shrink and melt.

If you have any questions or suggestions or would like to order more... then please feel free to contact us using any of the means listed below.

Through our website: www.ukshootwarehouse.com

By email: sales@ukshootwarehouse.com

By phone: 02476 329 510

Or for the social media savvy, you can find us on Facebook at www.facebook.com/ukshoot or Follow us on Twitter @theukshoot. You can post your ideas, comments and feedback - and post pictures too!

However you choose to contact us, we love to hear from you.

Happy and Safe Hunting from the team at UKshootwarehouse.com!

UKshootwarehouse.com

Quality in your field