



INSTRUCTIONS

UKSW Standard Rotary

Thank you for purchasing this rotary which is suitable for mounting either your own dead birds or Sillosocks branded Hypa-Flaps.

This machine rotates at a fixed speed so you may want to consider buying a speed controller if you wish to adjust your decoy rotation. The following instructions are intended as a guide and do not guarantee 100 bird days in the field!

What's in the Box?

You should have;

Motor Unit

2 x Pigeon Magnet Rotary Arms (Telescopic)

2 x Wing Spreaders

Additional items you may have ordered will have their own instructions.

Operation

Warning!! Moving arms – once connected to the motor housing and battery the arms will rotate and could cause serious injury to you or anyone standing within the radius of them. The motor rotates in an anti-clockwise direction.

1. Site the unit within the area you intend to decoy, ensuring that you can see and control access to the unit (by curious passers-by or animals which are not quarry!)
2. Press the base into the ground so it is firm and level then mount the telescopic arms, the thumb screw should face the ground and adjust the length of the inner arm as required, tighten using the thumb screw to the required length. *Note: The hole at the end of the arm is part of the manufacturing process only.*
3. Mount the Wing Spreaders, with points uppermost, approximately half way down the end spar and tighten with the thumb screw. These can be adjusted later as required.
4. Mount decoy birds onto the arms, use the central spar to pierce the body of a real bird and mount the wings onto the spreader. Remember that the unit rotates anti-clockwise, birds flying backwards won't really contribute to your day.
5. You can now attach the power supply being careful to avoid the moving parts. If you have purchased a Speed Controller please see the relevant instructions on connecting them, but always connect the controller to the machine before connecting the battery.

6. The rotary will last for a good few hours shooting if you start the day with a fully charged, serviceable battery (*12 or 17 Amp. Hr battery recommended*). Wipe off any excess moisture and soil before packing the unit away and keep the battery cables neatly coiled when not in use to avoid splits and kinks.

If you have any questions or suggestions or would like to order more... then please feel free to contact us using any of the means listed below.

Through our website: www.ukshootwarehouse.com

By email: sales@ukshootwarehouse.com

By phone: 02476 329 510

Or for the social media savvy, you can find us on Facebook at www.facebook.com/ukshoot or Follow us on Twitter @theukshoot. You can post your ideas, comments and feedback - and post pictures too!

However you choose to contact us, we love to hear from you.

Happy and Safe Hunting from the team at UKShootWarehouse.com!

Please exercise caution when using this product UK Shootwarehouse accept no liability for accidents however caused whilst using this equipment.