


Sillosocks Geese Decoys



Assembly Instructions

Lay the silhouette head on a hard flat surface and push the stake into the head with one hand while applying pressure - with your other hand flat on the decoy head. Put the stake in just behind the tip of the bill and up the middle of the head. For best results you want the back of the decoy parallel to the ground when the stake is perpendicular to the ground. The stake should go past the bottom of the neck (see picture below). Wearing leather gloves will help gripe the stake for insertion.

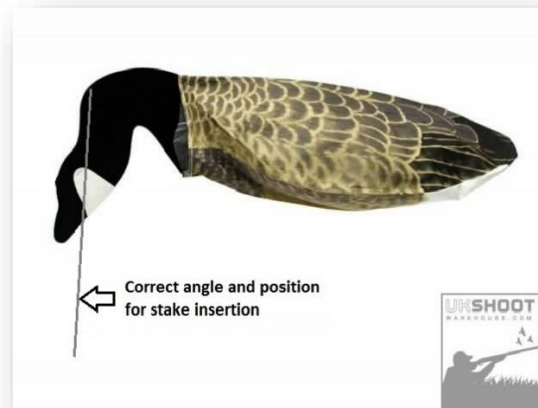

Pic 1 Shows the recommended angle to insert a stake - keeping the back parallel to the ground. When the decoy is set with the stake perpendicular to the ground, the "backbone" of the body should be parallel with the ground. This ensures that when the wind shifts, the decoy will always look good. Again, pay attention to the angle at which the stake is inserted into the head.

Instructions for use

Place the spring steel stake into the ground as far as needed to hold the decoy in place.

When placing the decoy in calm conditions (ie no wind), shake the decoy by the neck or blow into the bag (to inflate) until the wind picks up.

If mixing the Sillosocks with other decoys, put the Sillosocks downwind and on the outside edges of the spread.

Helpful hints:

Place the decoy facing into the wind for best results. The windssock will usually orient into the wind on its own.

1. Insert the stake vertically into the ground. That way when the wind changes direction, the backbone of the decoy remains parallel to the ground and always looks good.

Exception to this rule: in heavy wind, lean the stake back to where the tail of the decoy touches the ground. Also, push the stake in further into the ground to where the bill touches. This will slow any excessive movement of the decoy.

2. If used during rain you may cut a slit along the Sillosocks logo to drain water while in use -it will not affect decoy action.
3. In high wind situations (+ 38 mph), push stake further into ground to shorten the distance from the bill to ground.
4. Set out and pick up the decoys by the stakes not the heads.
5. When using Sillosocks in cut cornfields you can insert the stake directly into cut stalks.
6. Use care when storing and transporting the decoys to avoid crushing the head and body.
7. The Tyvek windssock bodies can be washed in the washing machine on a gentle cycle. If you do this then please drip dry! Do not use hot water or hot heat in the dryer or they will shrink and melt.

If you have any questions or suggestions or would like to order more... then please feel free to contact us using any of the means listed below.

Through our website: www.ukshootwarehouse.com

By email: sales@ukshootwarehouse.com

By phone: 02476 329 510

Or for the social media savvy, you can find us on Facebook at www.facebook.com/ukshoot or Follow us on Twitter @theukshoot. You can post your ideas, comments and feedback - and post pictures too!

However you choose to contact us, we love to hear from you.

Happy and Safe Hunting from the team at UKshootwarehouse.com!

UKshootwarehouse.com

Quality in your field