



INSTRUCTIONS

Motorised Pigeon Hypa-Flap (Remote Controlled) (RC)

Thank you for purchasing this Sillosocks Pigeon RC please read through the instructions to familiarise yourself with its operation before using it in the field.

This unit is designed to operate with a 12v battery up to 17Ah.

What's in the Bag?

You should have;

The remote control unit (with battery), spars x 2, and a pigeon.

Operation

1. Insert the wing spars into the wing pocket, over the top of the wing, through the central cut-out and then into the wing socket (you will have to bend the spar to insert it).
2. ***Important*** To use for the first time you will need to configure the remote. To do this, ensure the battery is fitted into the remote, connect the black lead to the battery and before connecting the red lead begin to press and hold "On" for 5 seconds - then while still pressing "On", connect the red lead to the battery. Keep "On" depressed for another 5 seconds. Press "On", once the wings are flapping re-press "Intermittent" or "off". Your Decoy is now ready to use.
4. Remember to wipe off any excess moisture & dirt before storing the remote and decoy to prevent damage.

If you have any questions about the operation of the Decoy please visit our website www.ukshootwarehouse.com and look for the Motorised Pigeon Page.